

True-RMS meter untuk mengukur
RMS dari error :

$$\text{Error RMS} = \sqrt{\frac{1}{T} \int [\text{error}]^2 dt}$$

