
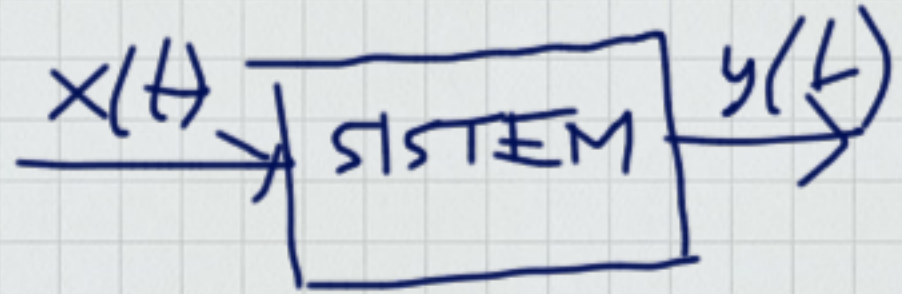


⇒ Model Watak Alih (Transfer characteristics)

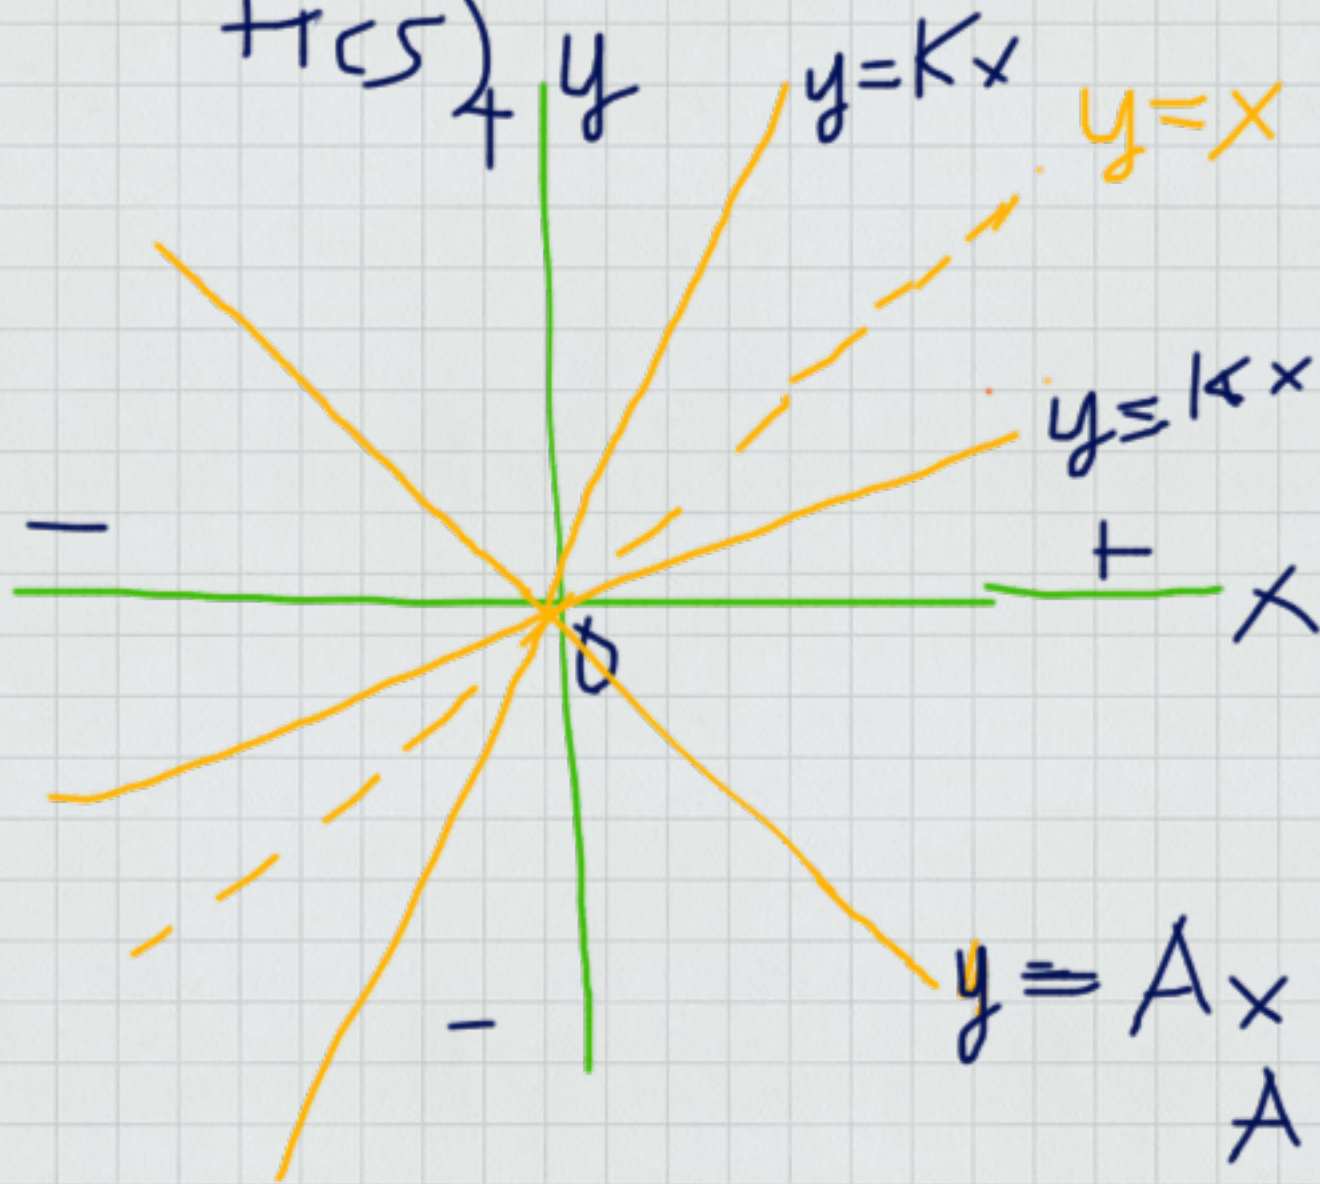

$y = kx, k > 1 \rightarrow$ penguat (Amplifier)

$y = kx, 0 < k < 1$
redaman (Attenuator)

$y = Ax, A < 0$ } Penguat Membalik (Inverting Amp.)

⇒ Lebih OK utk Sistem Tak Linier